


30Y rider

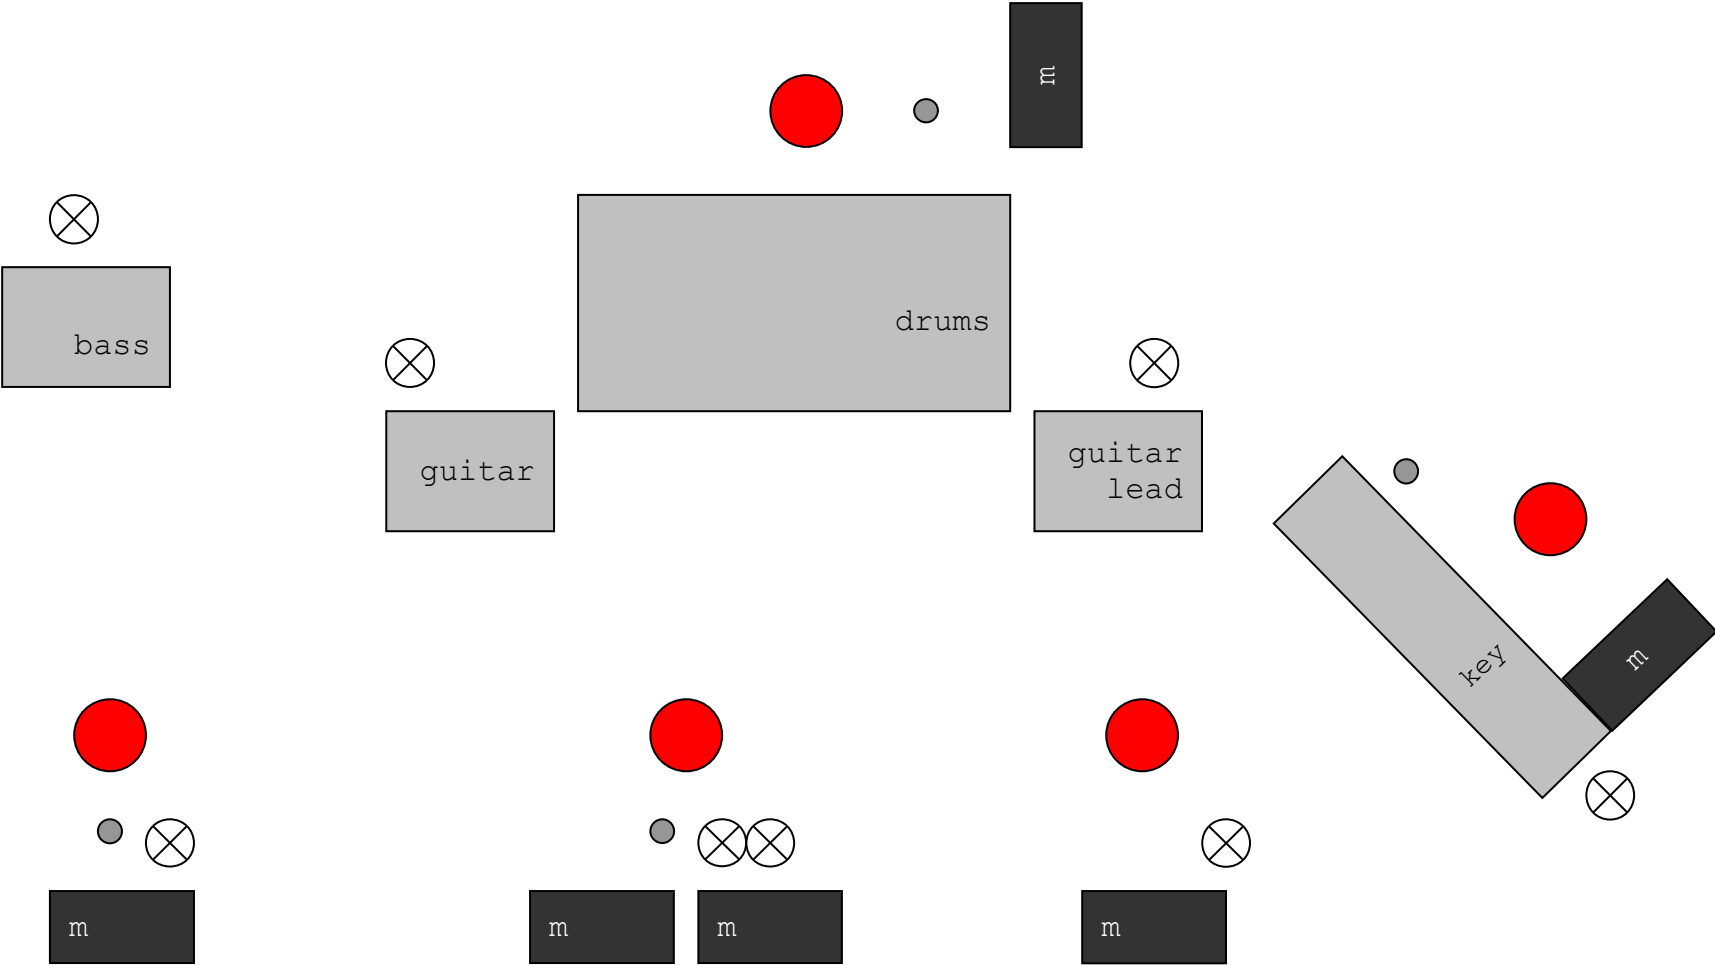

30Y rider

● mikrofon

⊗ 220 V

● 30Y

m monitor

erősítők/effektek/hangszórók	hangosítás jellege	igény
bass Gallien-Krueger	vonalból [canon]	1x220V erősítőhöz 1x220V effekthez 1 mikrofon [vokál]
guitar Yamaha	1 mikrofonnal	1x220V erősítőhöz 3x220V effekthez 1 mikrofon [főének]
guitar lead VOX AC-30	1 mikrofonnal	2x220V erősítőhöz 1x220V effekthez
keyboard Roland-SH-32 szintetizátor agy Korg SP-100 elektromos zongora Yamaha - DX7 zongora	2x2 stereo-kábellel [jack] 1X1 mono-kábellel [jack]	1x220V 1 mikrofon [vokál]
drums -	9 mikrofonnal	1 mikrofon [vokál]

30Y rider

No./ Channel	Name / Instrument	Microphone / DI-box	Insert / FX	Microphone
01	Kick Drum	mic	Gate	Audix - D6
02	Snare	mic	Reverb	Audix – i5
03	Snare	mic	Reverb	Audix – i5
04	Hi-Hat	mic		Audix – ADX51 / Audix – SCX1
05	Tom 1	mic	Gate / Reverb	Audix – D2 / Audix – D4
06	Tom 2	mic	Gate / Reverb	Audix – D2 / Audix – D4
07	Overhead L	mic		Audix – ADX51 / Audix – SCX1
08	Overhead R	mic		Audix – ADX51 / Audix – SCX1
09	Ride	mic		Audix – ADX51 / Audix – SCX1
10	Bass	Internal DI-box		
11	Guitar	mic		Audix – i5
12	Guitar Lead	mic		Audix – i5
13	Keyboard 1 L	Line DI-box		
14	Keyboard 1 R	Line DI-box		
15	Keyboard 2 L	Line DI-box		
16	Keyboard 2 R	Line DI-box		
17	Keyboard 3	Line DI-box		
18	Vocal / Bass	mic	Reverb / Hall	Audix – OM5, OM6, OM7, OM11
19	Vocal / Main	mic	Reverb / Hall	Audix – OM7 (saját)
20	Vocal / Keyboard	mic	Reverb / Hall	Audix – OM5, OM6, OM7, OM11
21	Vocal / Drum	mic	Reverb / Hall	Audix – OM5, OM6, OM7, OM11
22	Acc. Guitar	Line DI-box		
23	Trumpet			Audix – ADX20i

Monitorigény: 6 út ebből 5 út lábmonitor, egy út fülmonitor (mi visszük Shure PSM-600)